


AQUAMETA PT420-0.5VFU

Hydrostatic Chemical Level Sensor

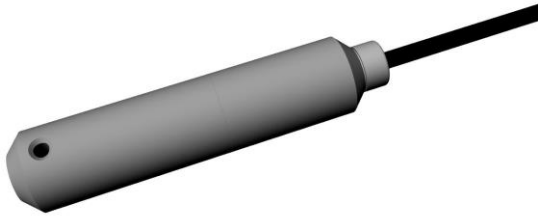

- 9 to 30V
- Temperature compensated
- Barometric pressure compensation via vented cable
- High linearity and low hysteresis values
- EMI Certified
- Excellent resistance to corrosion and abrasion
- Automated offset and span correction
- Age compensation

The PT420 series of 4-20mA pressure transducers are a cost effective and robust solution designed for continuous level measurement where a 4-20mA output is required. It may be used with other liquids that are compatible with its wetting materials which are UPVC, Viton, FEP and PTFE. Different choice of seals is available for other applications. The PT420-0.5VFU is suitable for pressure application of 0.5 bar (5.1m H₂O). 1 and 10 bar options are available. The sensor includes temperature and barometric pressure compensation.

Transducer Construction

This state of the art pressure sensor uses a flush PTFE coated Ceramic diaphragm in conjunction with on-board signal conditioning to measure pressures. Pressure and temperature calibration is done electronically with the internal application-specific integrated circuit (ASIC). When pressures and temperatures change, the electronics provide an offset and span correction. It also includes aging detection and compensation. This new method guarantees good precision and long term stability.

The sensor is encapsulated in a UPVC body that is filled with an epoxy.

The sensor cable is molded into the transducer eliminating problems associated with threaded plugs. This design ensures a very high level of reliability.

Output Signals

The PT420 transducer uses a two wire 4-20mA output signal. The signal is linear with pressure. The sensor will operate with a supply voltage that can range from 9V to 30V DC. The Aquameta Junction box may be used to extend the transducer cable with any other cable. The vented junction box has a Gortex covered opening that allows venting to atmosphere to take place whilst restricting the ingress of moisture.

Applications

- Level measurement in above and underground tanks.
- Sodium Hypochlorite and other chemicals that are compatible with the wetting materials.

Features

- 4-20mA output

AQUAMETA PT420-0.5VFU

Hydrostatic Chemical Level Sensor

Technical Data PT420-0.5 and 1.0 VFU


Input pressure range			
Nominal pressure gauge	[bar]	0.5	1
Level	[mH ₂ O]	5	10
Overpressure	[bar]	1	2
Burst pressure ≤	[bar]	2	4

Output signal / Supply	
Standard	2-wire: 4... 20 mA/Vs = 9 ... 35V _{dc}
Performance	
Accuracy	≤ ± 0.5% FSO
Permissible load	$R_{max} = [(V_s - 9)/0.02A]\Omega$
Influence effects	supply: 0.05 % FSO/10V load: 0.05 % FSO /k Ω
Long term stability [%FS/year]	≤ ± 0.3 @ 25 [°C]
Response time	≤ 5ms
Thermal Effects(Offset and Span)	
Thermal error	≤ 0.007/10 [°C]
Permissible temperatures	
Permissible temperatures	medium: -25/+65[°C] storage: -40/+135[°C]
Electrical protection	
Short-circuit protection	Permanent
Reverse polarity protection	No damage – no function
Norms compliance	Radiated electromagnetic field IEC/EN 61000-4-3(2006) Electrical fast transition burst IEC/EN 61000-4-4(2004) RF conducted disturbances IEC/EN 61000-4-6(2006)
RoHS compliance	RoHS
Electrical connection	
Cable with sheath material	FEP (0 ... 65°C) black
Standard cable length	2m (Custom cable lengths available)
Materials(media wetted)	
Housing	U-PCV grey
Seals	Viton
Diaphragm	PTFE
Miscellaneous	
Current consumption	Max. 25mA
Weight	± 135g (without cable)
Ingress protection	IP 68
Country of origin	Australia
Warranty	1 Years

AQUAMETA PT420-0.5VFU

Hydrostatic Chemical Level Sensor

Wiring diagram 2-wire-system (current)

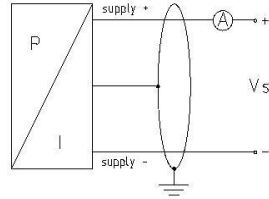

Pin configuration

Supply +	Red
Supply -	Black
Shield	Ground wire bare

